

# Removal and Installation of Left or Right Wiper Blade of Windshield Wiper

Job No.

82 — 7

## a) Bosch Type

### Removal:

1. Lift the wiper arm (1), with the wiper blade, away from the windshield. Press down the spring (6) on the wiper blade (2) and push the wiper blade out of the anchorage in the direction of the wiper shaft (Fig. 82 — 7/1).

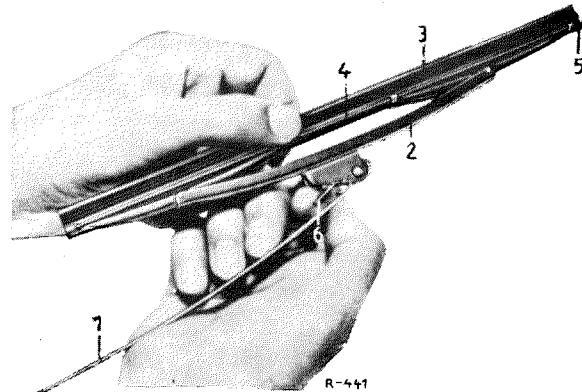


Fig. 82 — 7/1

- |               |                     |          |
|---------------|---------------------|----------|
| 1 Wiper arm   | 3 Rubber molding    | 5 Clamp  |
| 2 Wiper blade | 4 Retaining springs | 6 Spring |

### Installation:

2. Install the wiper blade (2) by sliding it into the anchorage of the wiper arm (1) in the reverse direction until the spring (6) is heard to click into position.

## b) Avog Type

### Removal and Installation:

1. Lift the wiper arm (1) with the wiper blade away from the windshield. Push the lever (6) in the direction indicated by the arrow on the wiper blade (2) and take out the wiper blade or insert it, as required (Fig. 82 — 7/2).

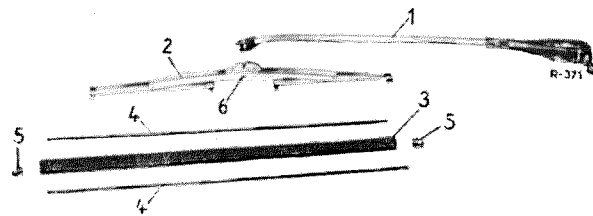


Fig. 82 — 7/2

- |               |                     |         |
|---------------|---------------------|---------|
| 1 Wiper arm   | 3 Rubber molding    | 5 Clamp |
| 2 Wiper blade | 4 Retaining springs | 6 Lever |

The complete wiper blade assemblies (with arms) of both makes are interchangeable, that is to say a wiper blade (with arm) of the firm of Avog can, if necessary, be used on a windshield wiper assembly of the firm of Bosch and vice versa.