

## Removal and Installation of Left or Right Heat Exchanger

### Removal:

1. Drain the cooling water. The drain cock is located in the bottom right corner of the radiator.
2. Disconnect the upper and lower water hoses (1) at the heat exchanger.

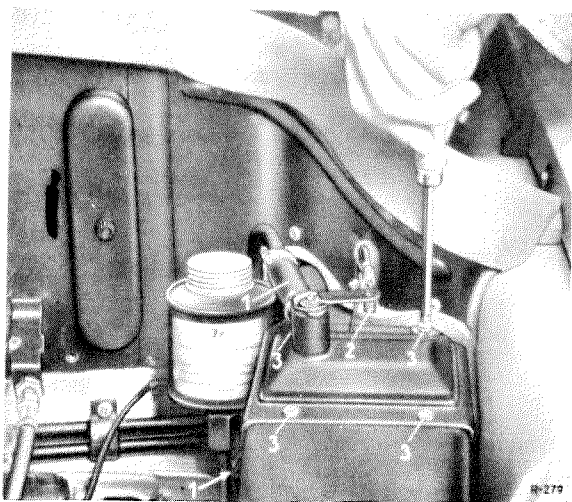


Fig. 83 — 1/1

- 1 Water hoses
- 2 Wire cable
- 3 Oval-head screw

3. After removing the locking plate, detach the wire cable (2) at the regulating valve of the heat exchanger and pull it out (Fig. 83 — 1/1).
4. Unscrew the four oval-head screws (3), bearing in mind the fact that the fourth oval-head screw also holds the engine compartment side panel.
5. Unscrew another fixing screw at the back of the engine compartment panel so that the panel can be pushed backward far enough to enable the heat exchanger to be removed upward.  
On the right engine compartment panel it is only necessary to detach the tension spring at the bottom left.

6. Pull out the heat exchanger upward.

### Installation:

7. Installation is the reverse of the removal procedure.

**Note:** When adjusting the wire cable, make sure that the regulating valve can be closed completely.