

B. Replacement of Left or Right Bulb

Removal:

1. Remove the headlight.
2. Remove the bulb from the lampholder.

on the reflector and reduces its reflecting efficiency.

5. Install the headlight.

Installation:

3. Insert the new bulb in the lampholder (see Fig. 82 — 1/3).

Note: Do not touch the bulb with bare (greasy) fingers; always use a clean cloth or a piece of tissue paper when inserting it. If this is not done, the bulb gives off a grease vapor when it becomes hot, and this vapor settles

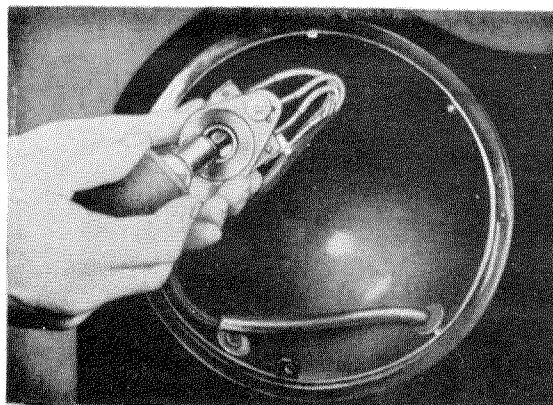


Fig. 82 — 1/3

C. Removal and Installation of Left or Right Headlight Glass

Removal:

1. Remove the headlight.
2. Use a screw driver to pry out the retaining springs.
3. Then remove the headlight glass rubber ring (see Fig. 82 — 1/4).
4. Remove the rubber ring from the headlight glass.

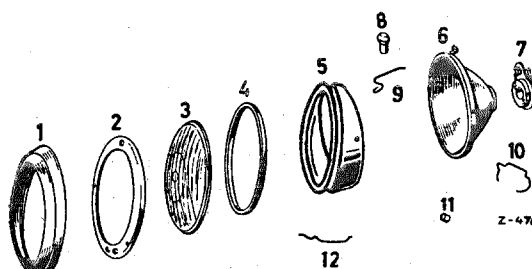


Fig. 82 — 1/4

Installation:

3. Installation is the reverse of the removal procedure.
When inserting the headlight glass, care must be taken to ensure that the longitudinal grooves are vertical.

- | | |
|---------------------------|--|
| 1 Ornamental ring | 8 Rubber stud with hole for reflector adjustment |
| 2 Retaining ring | 9 Retaining spring |
| 3 Glass | 10 Clamp spring |
| 4 Sealing ring | 11 Rubber pivot pin in reflector mounting ring |
| 5 Reflector mounting ring | 12 Retaining spring for reflector |
| 6 Reflector (mirror) | |
| 7 Lampholder | |