

# Removal and Installation of Left or Right Front or Rear Door Lock

Job No.

72—17

## Removal:

1. Remove the door trim panel (see Job No. 72—7).
2. Press out the locking spring (5) with a screw driver and detach the pull rod (4) (Fig. 72—17/1).
3. Unscrew the four fixing screws (3) and remove the lock (see Fig. 72—17/1).

## Installation:

4. Installation is the reverse of the removal procedure.

**Note:** When door locks with pressure-cast aluminium casings are used, the contact surfaces of the lock casing should be provided with adhesive linen tape.

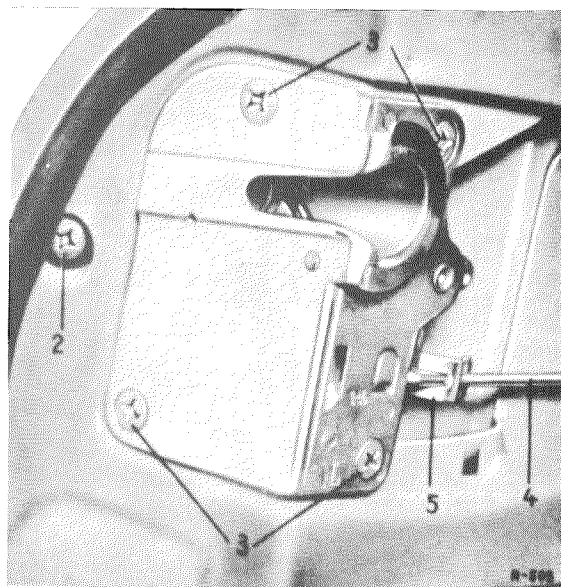


Fig. 72—17/1

- 2 Fixing screw for door handle
- 3 Fixing screw for door lock
- 4 Pull rod
- 5 Locking spring

# Removal and Installation of Front or Rear Inner Door Handle

Job No.

72—18

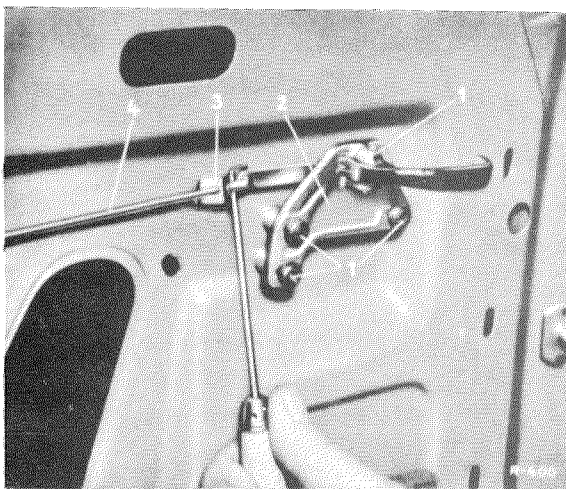


Fig. 72—18/1

- 1 Fixing screw
- 2 Retaining plate and inner handle
- 3 Locking spring
- 4 Pull rod

## Removal:

1. Remove the door trim panel (see Job No. 72—7).
2. Press out the locking spring (3) with a screw driver and detach the pull rod (4) (Fig. 72—18/1).
3. Unscrew the four fixing screws (1) for the retaining plate (2) of the inner handle and remove the handle together with the retaining plate.

## Installation:

4. Installation is the reverse of the removal procedure.