

# Removal and Installation of Hood Hinge

## Removal:

1. Remove the hood (see Job No. 88—6).
2. Remove the two hexagon nuts (1) from the stud bolts. Then remove the hexagon screw (2) (Fig. 88—7/1).

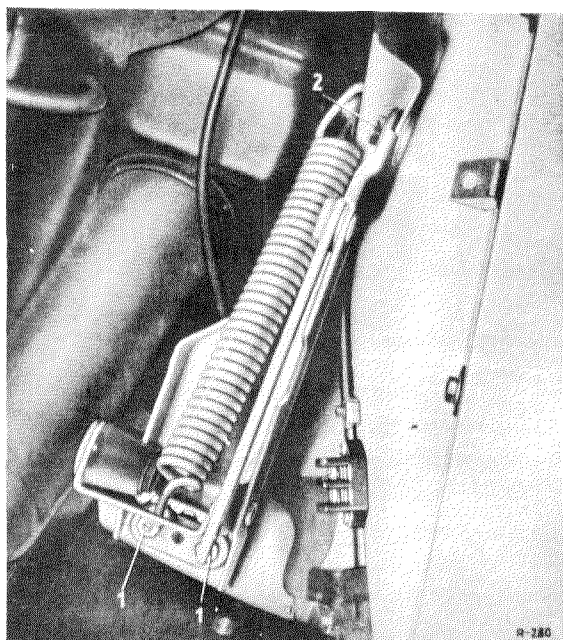


Fig. 88—7/1

Right hinge seen in the direction of travel

- 1 Hexagon nut
- 2 Hexagon screw

3. Remove the cup washers (8), the rubber mounting (9), the rubber ring (10), and the bushing (11) (Fig. 88—7/2).
4. Remove the hood hinge together with upper cup washer (12) and rubber pad (14) (Fig. 88—7/2).

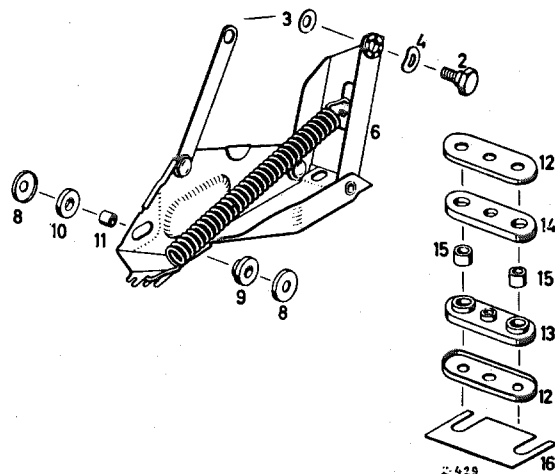


Fig. 88—7/2

- |                             |                    |
|-----------------------------|--------------------|
| 2 Hexagon screw with shank  | 11 Bushing         |
| 3 Lock washer 000 990 04 48 | 12 Cup washer      |
| 4 Lock washer 000 990 00 48 | 13 Rubber mounting |
| 6 Right hood hinge          | 14 Rubber pad      |
| 8 Cup washer                | 15 Bushing         |
| 9 Rubber mounting           | 16 Support plate   |
| 10 Rubber ring              |                    |

If necessary, remove the rubber mounting (13) together with lower cup washer (12), bushing (15), and support plate (16).

## Installation:

5. For installation, reverse the removal sequence, noting, however, that the fixing screws should only be finally tightened after aligning the hood (see Job No. 88—6).

**Note:** For height adjustment, support plates are available in two different thicknesses, viz.:

- |                           |              |
|---------------------------|--------------|
| Part No. 10 120 887 00 56 | 1.5 mm thick |
| Part No. 10 120 887 01 56 | 3.0 mm thick |

The tension of the spring can be adjusted as required by attaching the spring to any one of the three notches at the hood hinge.