

## A. Removal and Installation of Roof Light

### Removal:

1. Take out the insert (3) for the cigar-lighter (Fig. 82 — 11/1).

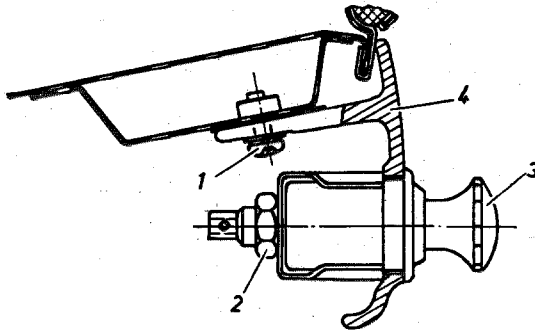


Fig. 82 — 11/1

- 1 Fixing screws
- 2 Fixing nut
- 3 Insert for cigar-lighter
- 4 Mounting plate for control knobs

2. Disconnect the feed cable, unscrew the fixing nut (2) and take off the ground cable. Remove the bracket and take out the cigar-lighter (see Fig. 82 — 11/1).

### Installation:

3. Installation is the reverse of the removal procedure.

Connect as follows:

The brown ground cable (Lead No. 30) under the fixing nut (2),

the black cable (Lead No. 9) to the terminal (see Job No. 54 — 1, Section A, Circuit Diagram of Main Wiring Harness, Cable Sheaves 8 and 9).

## B. Replacement of Lighter Element

### Removal:

1. Take out the insert (3) for the cigar-lighter (see Fig. 82 — 11/1).
2. Unscrew the lighter element with the thumb, by pressing it in and turning it to the left.
3. If necessary, clean the contacts of the cigar-lighter socket.

### Installation:

4. Screw the new lighter element into the insert with the thumb.
5. Put in the insert for the cigar-lighter.