

Removal and Installation of the Left or Right Front Door Sliding Window

Removal:

1. Remove the window regulator (see Job No. 72—8).
2. Remove the wooden wedge and carefully slide the window glass downward by hand.
3. Pull the window run channel at the hinge side slightly over toward the hinge side; this frees the sliding window which can then be turned by 90° in the window shaft between the door outer panel and the lower sash channel and can then be removed downward through the opening in the door inner panel (Fig. 72—9/1).

Installation:

4. Installation is the reverse of the removal procedure.

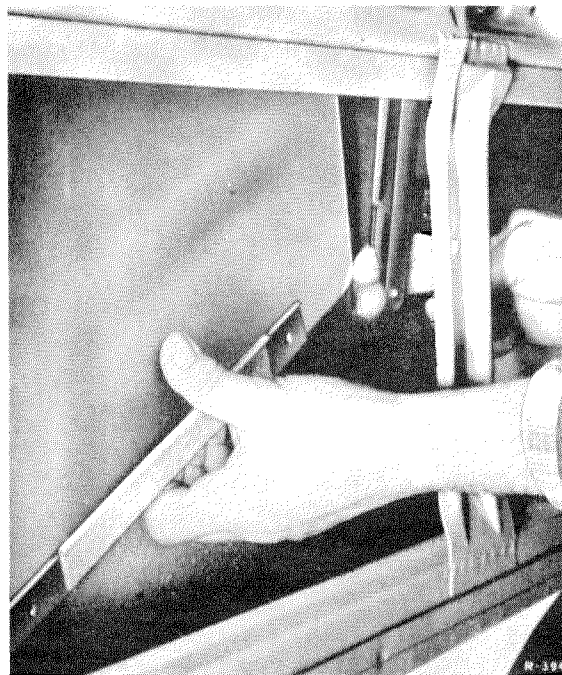


Fig. 72—9/1