

Removal and Installation of Covering on Trunk Compartment Cover Plate

Removal:

1. Remove the rear seat and the rear seat back (see Job No. 92—1).

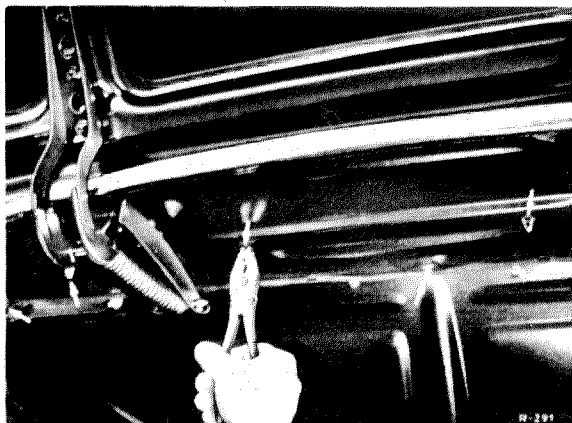


Fig. 69 — 5/1

2. Use flat-nose pliers to press the covering clamps together (they are accessible from the trunk compartment) and push them upward (Fig. 69—5/1).
3. Carefully loosen the covering material whose front edge is cemented to the sheet metal.
4. Remove the covering.

Installation:

5. On installation use the clamps at the underside of the covering to press the covering into the holes in the trunk compartment cover plate.

Cement the front edge of the covering material to the sheet metal.