

Bumpers

Job No.

88 — 5

A. Removal and Installation of Front or Rear Bumpers

Removal:

1. Unscrew the bumper bracket to the left and to the right from the chassis base panel and remove the bumper assembly together with brackets and guards (Fig. 88 — 5/1).

Installation:

2. Install the assembled front or rear bumper, align it, and screw it to the chassis base panel.

Note: When installing the rear bumper, make sure that the rubber buffers (33) are not displaced (Fig. 88 — 5/3).

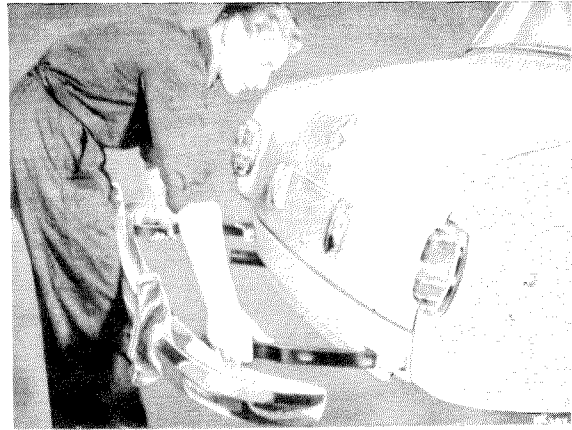


Fig. 88 — 5/1

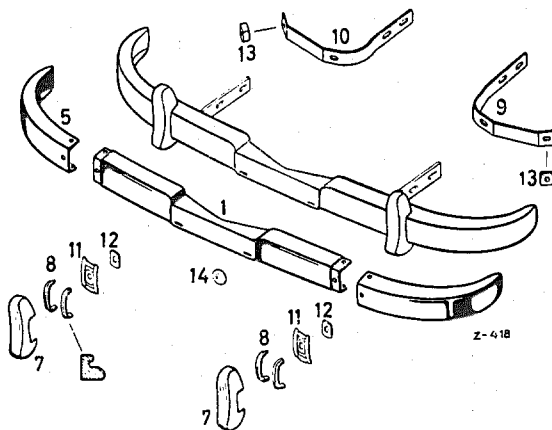


Fig. 88 — 5/2

Front bumper

- | | |
|---|-------------------|
| 1 Center bumper | 9 Bracket, left |
| 4 End bar, left | 10 Bracket, right |
| 5 End bar, right | 11 Mounting plate |
| 7 Guard, left and right | 12 Washer |
| 8 Rubber section 170 mm long between guard and bumper | 13 Square nut |
| | 14 Rubber washer |

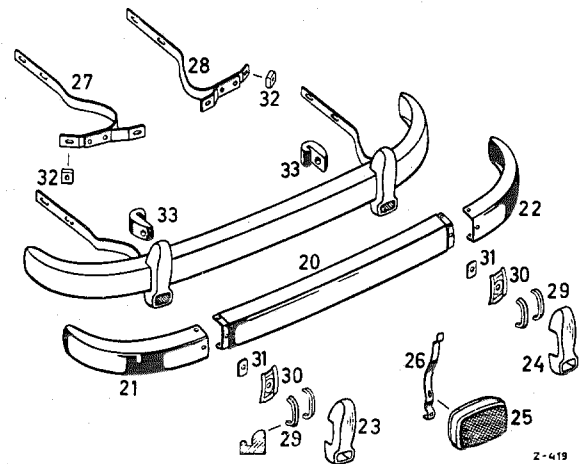


Fig. 88 — 5/3

Rear bumper

- | | |
|-------------------|---|
| 20 Center bar | 28 Bracket, right |
| 21 End bar, left | 29 Rubber section 170 mm long for bumper guard and bumper at rear bracket |
| 22 End bar, right | 30 Mounting plate |
| 23 Guard, left | 31 Washer |
| 24 Guard, right | 32 Square nut |
| 25 Rear reflector | 33 Rubber washer |
| 26 Spring | |
| 27 Bracket, left | |

B. Removal and Installation of the End Bar of the Left or Right Bumper

Removal:

1. Remove the bumper (see Section A).

2. Unscrew the two screws fixing the bracket and take off the guard with rubber section, mounting plate, and washer.