

Removal and Installation of Engine

Job-No.

01 — 0

The removal of the engine can be carried out in two ways:

- a) Engine together with transmission,
- b) Engine together with transmission and sub-frame.

Strict attention must be paid to the following instructions which apply to both methods of removal.

It is advisable to stand the car over a pit. If a pit is not available, the car must be raised sufficiently. The car must be raised only at its jack supports (see Fig. 01 — 0/1). The stands must be fitted with Adapter BE 10 004 in order to prevent the car from sliding off sideways. When raising the car with the jack, Adapter BE 10 986 must be fitted to prevent the car from sliding off (see Fig. 01 — 0/2).

When raising the car by means of a chain hoist or when lifting the front of the car off the sub-frame, Lifting Rig BE 10 989 must be used.

In all cases clean front fenders and fit fender covers!



Fig. 01 — 0/1

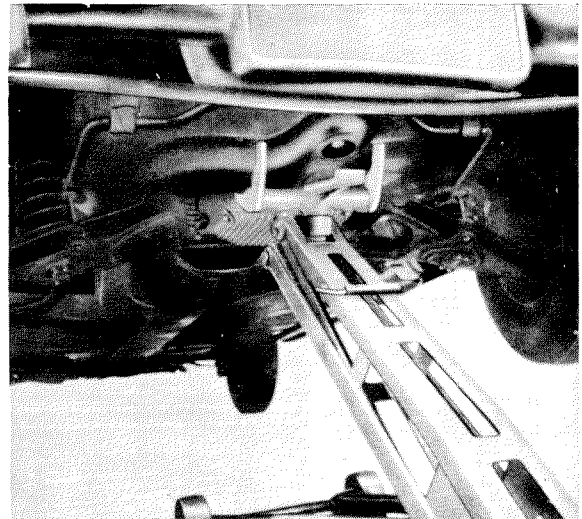


Fig. 01 — 0/2