

Removal and Installation of Toggle Change-over Switch for Parking Light

Job No.

82 — 16

Removal:

1. Pull out the two controls for the Bowden cables of the heating and air-conditioning system at the left side by means of a screw-driver (see Job No. 83 — 3).
2. Unscrew the fixing screws of the trim panel (18) for the instrument panel at the left and pull back the trim panel (18) far enough to permit removal of the toggle change-over switch (8) (see Fig. 82 — 15/1 and Job No. 83 — 3).

Note: The fixing screws are accessible from underneath the mounting plate for the control knobs.

3. Disconnect the feed cable.
Then unscrew the escutcheon, using Hook Wrench 136 589 02 05, and take off the switch.

Installation:

4. Installation is the reverse of the removal procedure.

When connecting the electric cables, pay attention to the color coding. Connect as follows:

The red yellow cable (Lead No. 60) to Terminal (1),
the green cable (Leads Nos. 67 and 69) to Terminal (2),
the green/black cable (Leads Nos. 70 and 68) to Terminal (3) (Fig. 82 — 16/1; the terminal numbers are not marked on the toggle change-over switch).

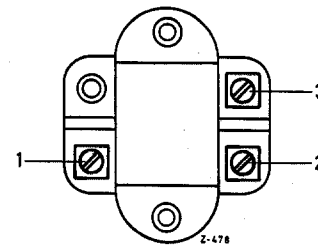


Fig. 82 — 16/1

(see Job No. 54 — 1, Section A, Circuit Diagram of Main Wiring Harness, Cable Sheaf **15**).

5. Check the functioning of the parking lights.