

Front and Rear Doors

The following sections (Job Nos. 72—2 to 72—21) describe all procedures necessary for the removal and installation of the attaching parts of the front doors. In all cases where the procedure also applies to the rear doors, this has been indicated in the heading.

Consequently, the procedures outlined under Job No. 73 and applying to the rear doors are restricted to those that are different from the operations applying to the front doors and described under Job No. 72.

Removal and Installation of Door Check Mechanism on Front or Rear Doors

Job No.

72—2

Removal:

1. Remove the door trim panel (see Job No. 72—7).
2. Loosen the adjusting screw for the door check mechanism (Fig. 72—2/1).

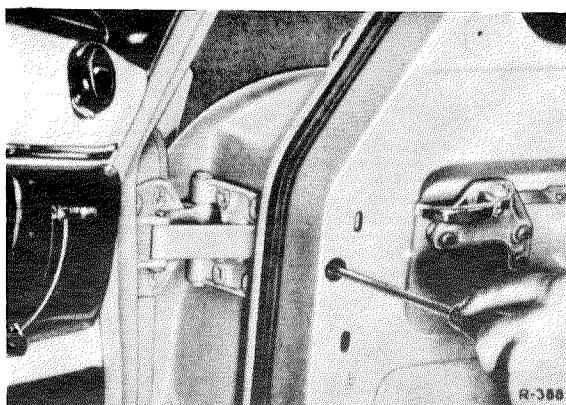


Fig. 72—2/1

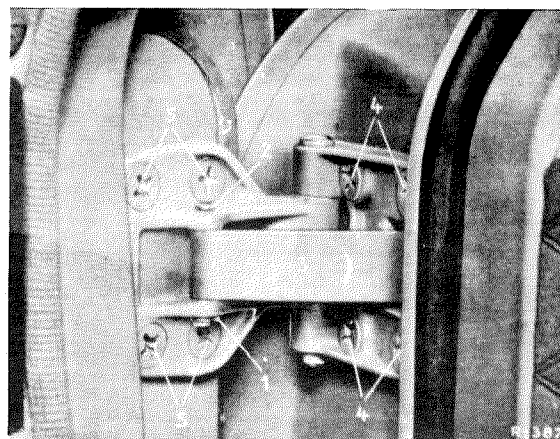


Fig. 72—2/2

- 1 Cotter pin
- 2 Door check pin
- 3 Door check strap
- 4 Fixing screws
- 5 Fixing screws

3. At the top door hinge, remove the cotter pin (1) from the door check pin (2) for the door check strap (3) and remove the pin (2) for the door check strap. Remove the fixing screws (4) (Fig. 72—2/2).

4. Push the door check strap to the inside and remove the door check mechanism from inside the door.

Checking:

5. Remove the adjusting screw (1), the retaining clamp (4), the sliding jaw (2), and the rubber cushion (3) (Fig. 72—2/3).