

Removal and Installation of Sliding Roof

Removal:

1. Open the sliding roof and push it back half-way. Then unscrew the two visible screws (4) at the left and right rear headlining (see Fig. 78 — 1/1).
2. Detach the metal rail (1) at the rear end of the headlining (2) by pushing it out of the 5 clamps (3) (Fig. 78 — 1/1).

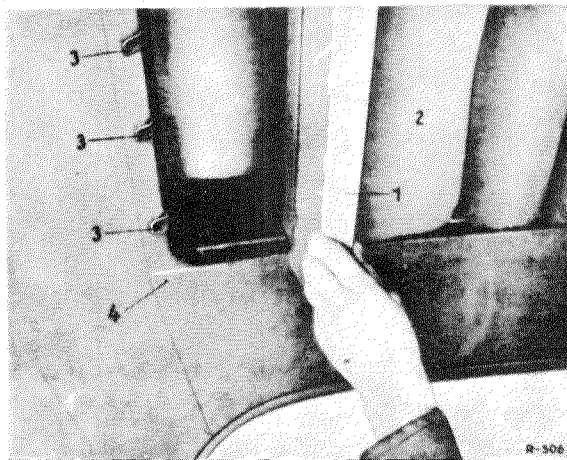


Fig. 78 — 1/1

- | | |
|--------------|----------|
| 1 Metal rail | 3 Clamps |
| 2 Headlining | 4 Screw |

Note: The metal rail is cemented to the rear end of the headlining. If necessary, the 5 clamps (3) can be slightly bent upward by carefully inserting a screw driver from behind.

3. Detach the left and right wire cable (3a) (Fig. 78 — 1/2).

After removing the adhesive tape, loosen the left and right sliding roof clamp screws (1).

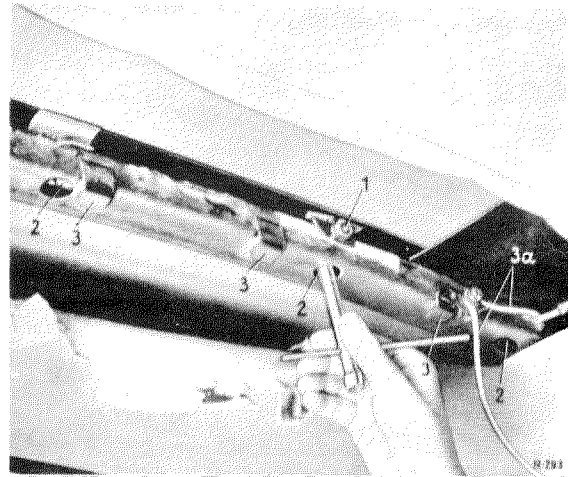


Fig. 78 — 1/2

- | |
|--------------------------------------|
| 1 Sliding roof clamp screw |
| 2 Sheet metal cover, rear (end rail) |
| 3 Clamp |
| 3a Wire cables |

4. Unscrew the rear sheet metal cover (2) from below, using Socket Wrench SW 10 (see Fig. 78 — 1/2).
5. Lift off the rear end of the sliding roof from the outside and fold it toward the front.
6. From the outside unscrew the two bow straps of the sliding roof fabric at the left and at the right from the rear part and push the sliding roof forward until the last three screws of the lateral guide rails (slide rails) become visible. Then remove these three screws.
7. Slightly lift the ends of the slide rails and remove the sliding roof toward the rear.

Installation:

8. Reverse the removal procedure and remember that the rear sheet metal cover must be sealed at the rear part with Plastolin Tape and at the corners with sealing compound.