

# Removal and Installation of the Hood

Job No.

88 — 6

1. Open the hood. Unscrew the fixing screws (1) at the hinge (2). Make sure that during this operation the two rear corners of the hood have an underlay of felt or similar material in order to avoid damage to the

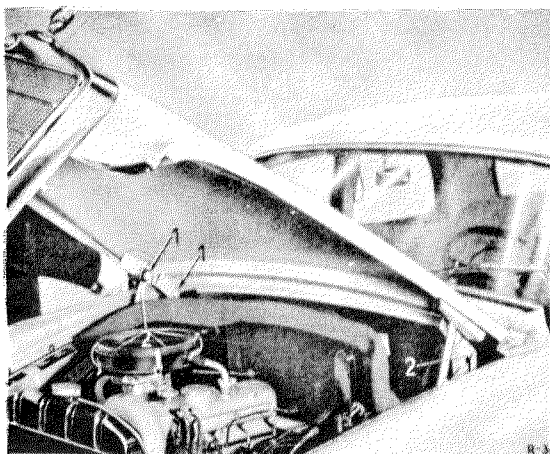


Fig. 88 — 6/1

1 Fixing screws  
2 Hood hinge

paintwork of the fender. If adequate care is used, it is sufficient to support the rear corners by hand (Fig. 88 — 6/1).

**Note:** In order to avoid damage to the front fenders by the two rear corners of the hood, it is advisable to have at least two or three mechanics on the job.

2. The third mechanic holds the hood at the radiator grille in order to prevent the hood from suddenly coming down at the moment when the fixing screws are removed.
3. Carefully remove the hood forward.

## Installation:

4. Installation is the reverse of the removal procedure.

If necessary, align the hood. For this purpose, fit the fixing screws loosely and align the hood in the closed position. Then open the hood and tighten the fixing screws.