

Removal and Installation of Left or Right Sun Visor

Job No.

81 — 1

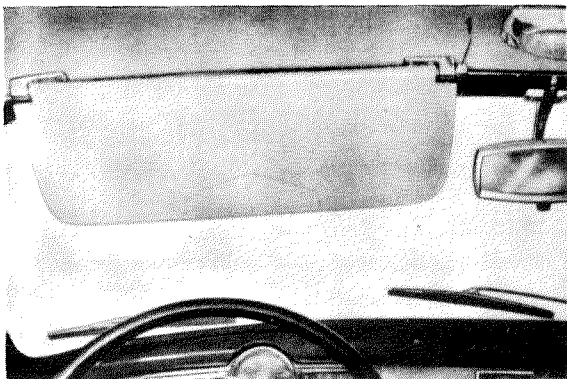


Fig. 81 — 1/1

1 Pressure screw

Removal:

1. Unscrew the pressure screw (1) and take out the taper pin (Fig. 81 — 1/1).
2. Take out the sun visor.
3. Unscrew the outside and the inside brackets.

Installation:

4. Installation is the reverse of the removal procedure.