

Front Door Ventilator

Job No.

72—13

A. Removal and Installation of Left or Right Ventilator

Removal:

1. Remove the sliding window (see Job No. 72—9).
2. Remove the outer and inner sliding window sealing strip (see Job No. 72—10).
3. Remove the sealing brush (see Job No. 72—11).
4. Remove the flexible window run channel (see Job No. 72—12).
5. Unscrew the three fixing screws (2) (see Fig. 72—12/1) and remove the ventilator (Fig. 72—13/1).

Installation:

6. Installation is the reverse of the removal procedure.

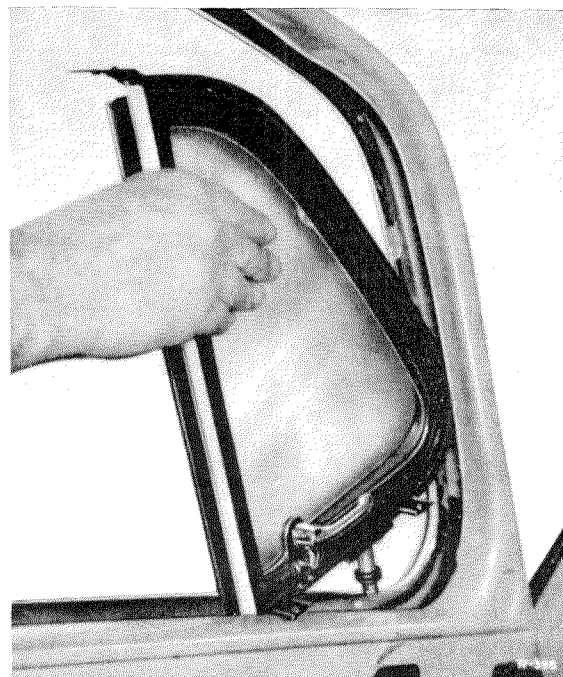


Fig. 72—13/1

B. Removal and Installation of Left or Right Ventilator Glass and Chromium-Plated Frame

Removal:

1. Remove the ventilator from the front door (see Section A).
2. Remove the two nuts (9) of the lower support pin, and remove the washer (8) and the four lock washers (7) (Fig. 72—13/2).
3. Remove the two hexagon nuts (5) from the lower support (6). Remove the two lock washers B 5 DIN 137, the two washers A 5 DIN 90 21, and the support (6).

Note: Pay attention to the two shims (4) between the support (6) and the ventilator frame (10).

4. Remove the two countersunk screws (2) of the upper support (1) and pull out the support (1).

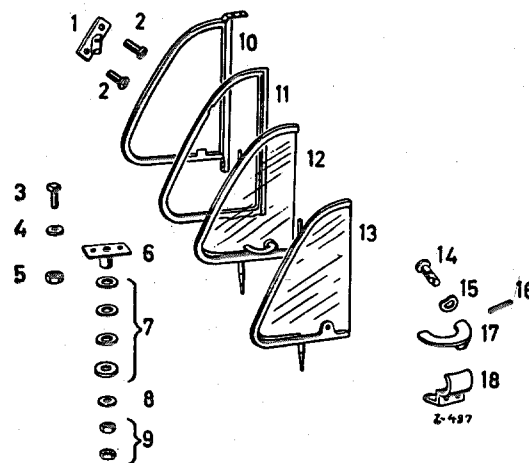


Fig. 72—13/2

- | | |
|------------------------------|-----------------------------------|
| 1 Upper support right | 10 Ventilator frame |
| 2 Countersunk screw AM 4 × 6 | 11 Weatherstrip |
| 3 Square head screw | 12 Ventilator right with latch |
| 4 Shim | 13 Ventilator right without latch |
| 5 Hexagon nut M 5 | 14 Latch pin |
| 6 Lower support | 15 Lock washer |
| 7 Lock washer | 16 Grooved pin 2 × 14 DIN 1472 |
| 8 Washer | 17 Latch |
| 9 Hexagon nut M 6 | 18 Latch stop |