

Headlights

Job No.

82 — 1

A. Removal and Installation of Right or Left Headlight

Removal:

1. Remove the oval head countersunk screw on the ornamental ring and take off the ornamental ring (Fig. 82 — 1/1).

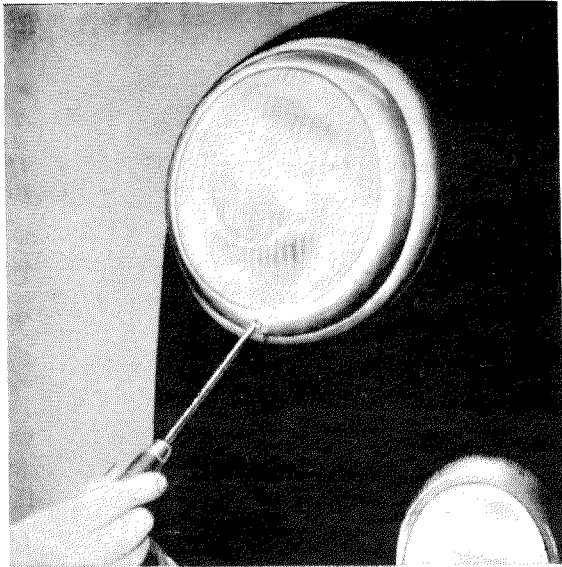


Fig. 82 — 1/1

2. Unscrew the retaining screw at the bottom of the headlight and take out the headlight.
3. Disconnect the lampholder clamp and take out the lampholder (Fig. 82 — 1/2).

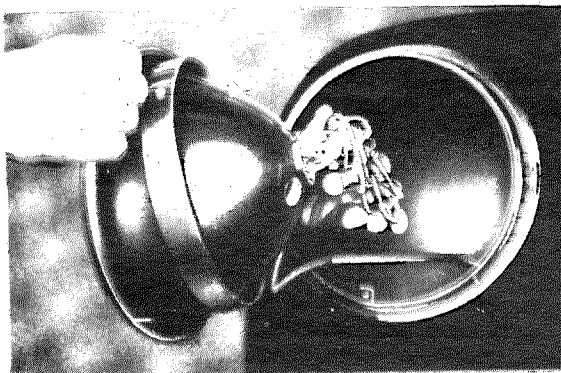


Fig. 82 — 1/2

4. Remove the headlight.

5. If necessary, disconnect the electric cables from the lampholder.

Installation:

6. Installation is the reverse of the removal procedure.
7. Connect up the electric cables to the lampholder; when doing this, pay attention to the color coding.

Headlight, left:

Connect up the white/black cable (Lead No. 64) to terminal 56a,
the yellow/black cable (Lead No. 77) to terminal 56b,
the grey/black cable (Lead No. 43) to terminal 58,

the brown cable (Lead No. 38) to terminal 31,

(see Job No. 54 — 1, Section A, Diagram of the Main Wiring Harness, Cable Sheaf **20**.)

Headlight, right:

Connect up the white cable (Lead No. 63) to terminal 56a,
the yellow cable (Lead No. 76) to terminal 56b,

the grey cable (Lead No. 42) to terminal 58,
the brown cable (Lead No. 35) to terminal 31,

(see Job No. 54 — 1, Section A, Diagram of the Main Wiring Harness, Cable Sheaf **22**.)

8. After the headlights have been installed, check and, if necessary, correct headlight adjustment (see Job No. 82 — 2).