

## B. Replacement of Left or Right Bulb

### Removal:

1. Remove the headlight.
2. Remove the bulb from the lampholder.

on the reflector and reduces its reflecting efficiency.

5. Install the headlight.

### Installation:

3. Insert the new bulb in the lampholder (see Fig. 82 — 1/3).

**Note:** Do not touch the bulb with bare (greasy) fingers; always use a clean cloth or a piece of tissue paper when inserting it. If this is not done, the bulb gives off a grease vapor when it becomes hot, and this vapor settles

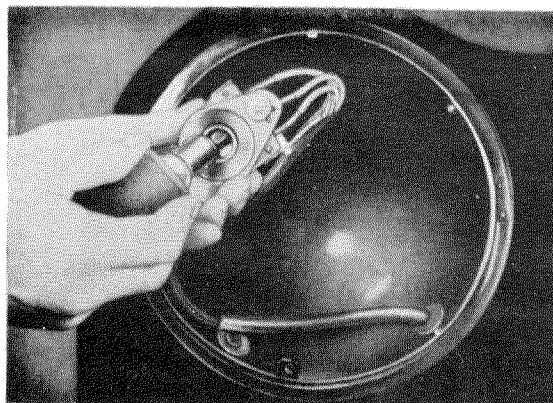


Fig. 82 — 1/3

## C. Removal and Installation of Left or Right Headlight Glass

### Removal:

1. Remove the headlight.
2. Use a screw driver to pry out the retaining springs.
3. Then remove the headlight glass rubber ring (see Fig. 82 — 1/4).
4. Remove the rubber ring from the headlight glass.

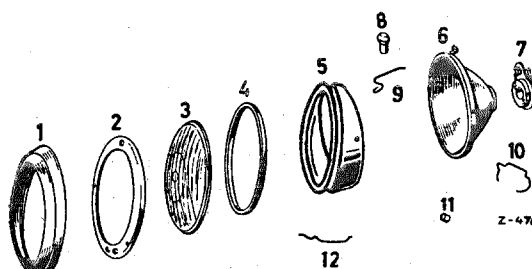


Fig. 82 — 1/4

### Installation:

3. Installation is the reverse of the removal procedure.

When inserting the headlight glass, care must be taken to ensure that the longitudinal grooves are vertical.

- |                           |  |
|---------------------------|--|
| 1 Ornamental ring         | 8 Rubber stud with hole for reflector adjustment |
| 2 Retaining ring          | 9 Retaining spring                               |
| 3 Glass                   | 10 Clamp spring                                  |
| 4 Sealing ring            | 11 Rubber pivot pin in reflector mounting ring   |
| 5 Reflector mounting ring | 12 Retaining spring for reflector                |
| 6 Reflector (mirror)      |  |
| 7 Lampholder              |  |