

Removal and Installation of Mounting Plate for Control Knobs

Removal:

1. Remove the ash-tray.
2. Remove the cable covering (cardboard) from the left glove compartment (below the mounting plate for the control knobs).
3. Disconnect the feed cable for the cigar-lighter, unscrew the fixing nut (2), and take off the ground cable (Fig. 68—1/1). Take off the bracket and remove the cigar-lighter.

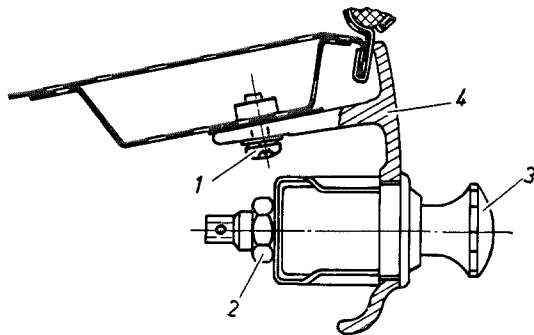


Fig. 68—1/1

- 1 Fixing screw
- 2 Fixing nut
- 3 Cigar-lighter
- 4 Mounting plate for control knobs

4. Use Hook Wrench 135 589 02 05 to unscrew the choke control knob and the guide screw (escutcheon). Pull the choke control out of the mounting plate toward the front so that the center fixing screw for the mounting plate becomes accessible (for details see Job No. 30—6, Removal and Installation of Choke Control).
5. Unscrew the 3 fixing screws for the mounting plate (see Fig. 68—1/1 and arrows in Fig. 68—1/2).

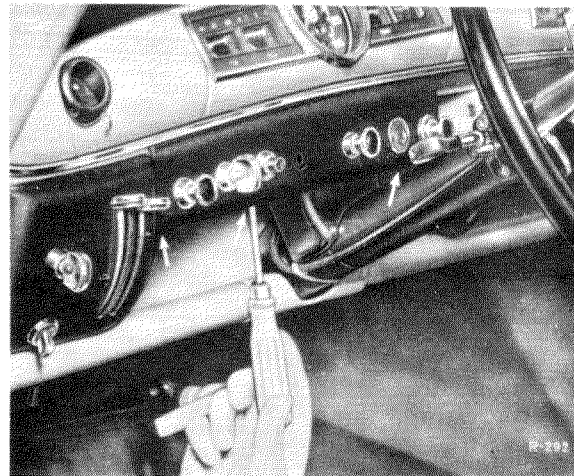


Fig. 68—1/2

Lift off the mounting plate as far as the cable connections permit.

6. Unscrew the 2 hexagon nuts at the knob at the back of the ignition control. Pull out the knob and unscrew the fixing nut (escutcheon) by means of Hook Wrench 136 589 02 05 (for details see Job No. 30—8).
7. Unscrew all other control knobs and escutcheons.
Then carefully remove the mounting plate. Do not disconnect the switches from their feed cables.

Installation:

8. Installation is the reverse of the removal procedure.
Connect the electric cables to the cigar-lighter as follows:
The brown ground cable (Lead No. 30) under the fixing nut (2), the black cable (Lead No. 9) to the cigar-lighter terminal. (See Job No. 54—1, Section A, Circuit Diagram of Main Wiring Harness, Cable Sheaves 8 and 9).