

C. Circuit Diagram

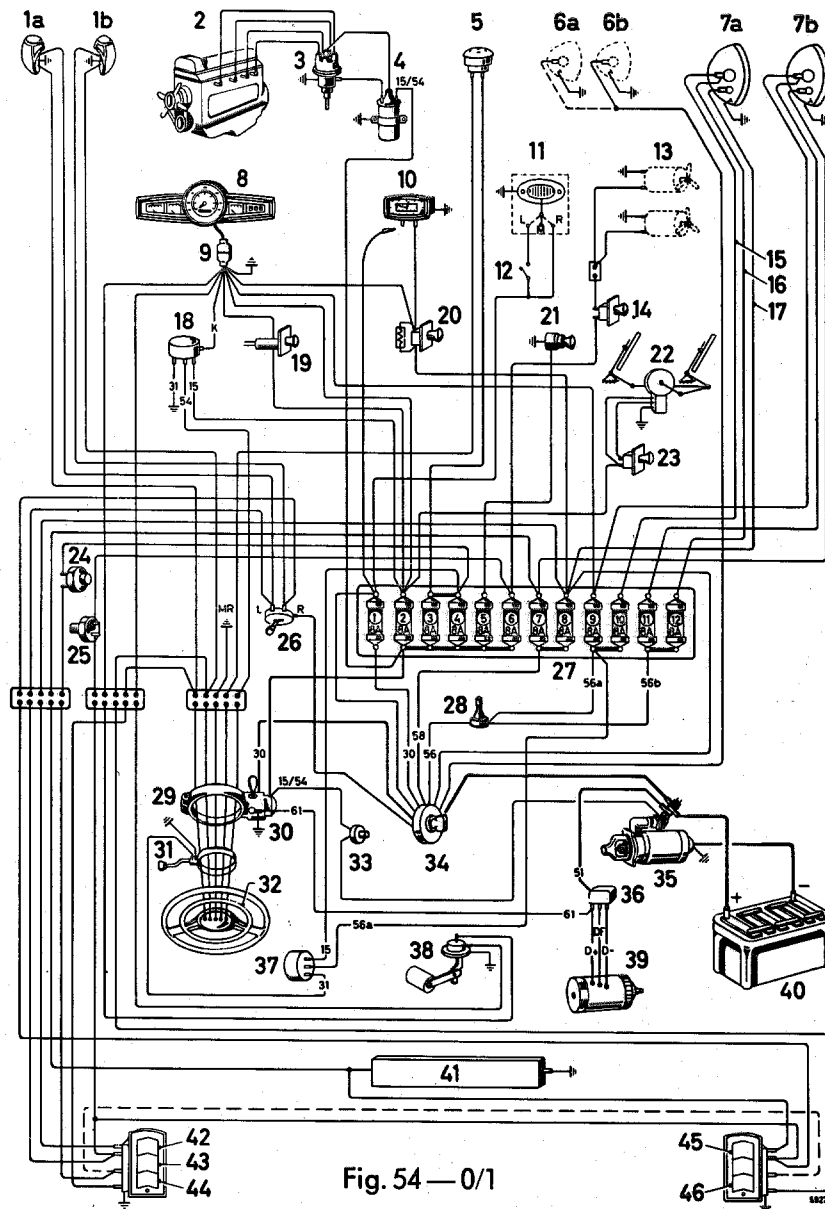


Fig. 54—0/1

The small numbers shown on the leads denote the numbers of the corresponding terminals. The terminals are in the appendix to the main wiring harness (see Job No. 54—1, Section B) opposite the appropriate description of the cable function. The number of the individual electric leads in the main wiring harness does not correspond to the numbering of the terminals.

- | | | |
|--|---|---|
| 1a Parking light and flash signal light, left | 18 Flash signal mechanism | 36 Regulator |
| 1b Parking light and flash signal light, right | 19 Starter cable | 37 Upper beam flash mechanism |
| 2 Engine | 20 Switch for instrument lighting | 38 Fuel gage |
| 3 Distributor | 21 Cigar lighter | 39 Generator 12 V |
| 4 Ignition coil | 22 Windshield wipers | 40 Battery 12 V, 56 Ah |
| 5 Horn | 23 Switch | 41 License plate and trunk compartment lighting |
| 6a Fog light, left | 24 Reversing light switch | 42 Tail light - brake light - parking light left |
| 6b Fog light, right | 25 Brake light switch | 43 Reversing light left |
| 7a Headlight, left | 26 Parking light changeover switch | 44 Flash signal left |
| 7b Headlight, right | 27 Fuses | 45 Tail light - brake light - parking light right |
| 8 Instrument cluster | 28 Foot dimmer | 46 Flash signal right |
| 9 Junction box | 29 Ignition switch and steering lock | 47 Cable connector for tail light harness (consisting of two five-way cable connectors) |
| 10 Clock | 30 Charging light | 48 Cable connector for steering tube harness |
| 11 Interior lighting with switch | 31 Headlight upper beam interrupter switch | |
| 12 Door contact | 32 Horn ring and flash signal switch | |
| 13 Heater blower motors | 33 Starter button | |
| 14 Switch | 34 Light switch (rotary, with positions for parking light and pull switch for fog lights) | |
| 15 Headlight, upper beam | 35 Starter 12 V | |
| 16 Headlight, lower beam | | |
| 17 Headlight parking bulb | | |