

# Removal and Installation of Outside and Inside Sealing Strip at the Right or Left Front or Rear Door

Job No.

72—10

## Removal:

1. Remove the sliding window (see Job No. 72—9 or Job No. 73—9).
2. Place a screw driver against the three retaining clips fastening the sealing strip (72—10/1) and knock out the clips downward.



Fig. 72—10/1

**Note:** The retaining clips fall into the window shaft and must be taken out, since otherwise they are liable to produce rattling noises. The retaining clips should not be used again, since they have been damaged during the removal.

## Installation:

3. Insert new retaining clips from below and with a slight jerk, using Special Tool 180 589 06 63 (Fig. 72—10/2).
- Note that at the door outer panel the retaining clips also hold the window frame (4) (Fig. 72—10/3).

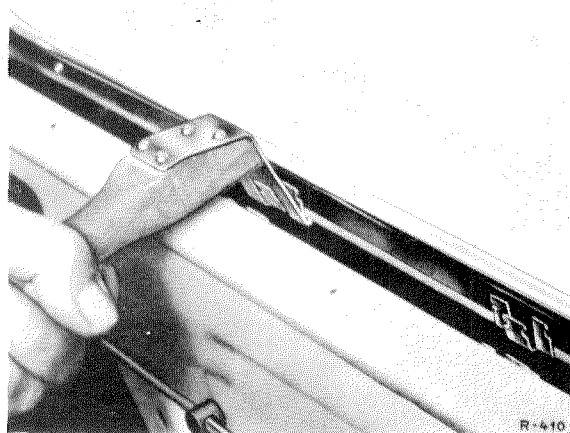


Fig. 72—10/2

For this reason the inside and outside retaining clips are different. Retaining clips marked II go with the door outer panel and those marked I with the door inner panel.

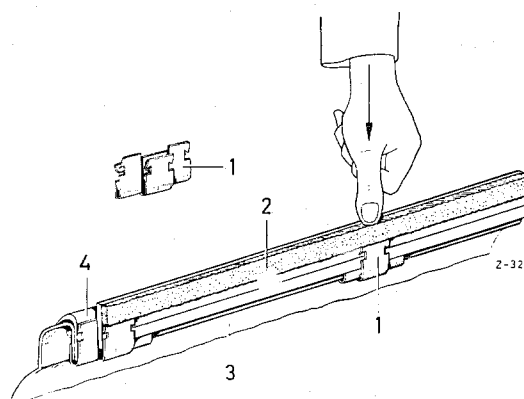


Fig. 72—10/3

- |                   |                    |
|-------------------|--------------------|
| 1 Retaining clips | 3 Door outer panel |
| 2 Sealing strip   | 4 Window frame     |

4. After installing the retaining clips, lightly press in the sealing strip downward (see Fig. 72—10/3).
5. Reinstall the sliding window (see Job No. 72—9 and Job No. 73—9).