

## Removal and Installation of the Sealing Brush at the Right or Left Front Door

Job No.

72 — 11

### Removal:

1. Carefully loosen the sealing brush (1) at the lower end by means of a putty knife and pull it out by hand (Fig. 72 — 11/1).


### Installation:

2. Before installing the sealing brush, give it a light coat of bodywork adhesive, and insert it between window frame and window run channel, **beginning at the lower end.**

**Note:** The lower end of the sealing brush should be in contact with the rear end of the outer sealing strip.

Fig. 72 — 11/1

- 1 Sealing brush
- 2 Window frame
- 3 Flexible window run channel

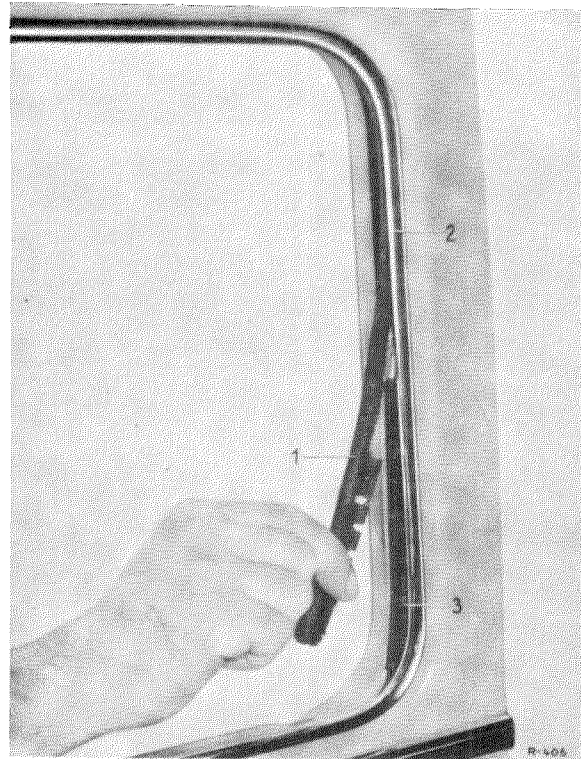

## Removal and Installation of the Flexible Window Run Channel at the Left or Right Front Door

Job No.

72 — 12

### Removal:

1. Remove the sliding window (see Job No. 72 — 9).
2. Remove the outside and inside sealing strip (see Job No. 72 — 10).
3. Remove the sealing brush (see Job No. 72 — 11).
4. Pry the flexible window run channel (1) loose where it is fastened with adhesive and pull it out of the retaining clips (Fig. 72 — 12/1).
5. Remove the old retaining clips by means of a screw driver (Fig. 72 — 12/2).

Fig. 72 — 12/1

- 1 Flexible window run channel
- 2 Ventilator fixing screw

